

12" Portable Belt Cutter

Installation Instructions




This unit is capable of cutting squarely belts up to 12" wide x 1/2" thick. It also has a platform area for Skiving the belt to the correct thickness to fit Fasteners.

! ATTENTION : TAKE CARE AT ALL TIMES. THIS UNIT CONTAINS A SHARP BLADE. REPLACE BLADE UNDER GUARD WHEN NOT IN USE.


Blade Replacement

The blade store is sited within the Belt Cutter.
Remove the plug (8). Take out the Blade.
Line up the blade clamp screw with hole (7). Replace Blade (9).
Re-tighten screw.

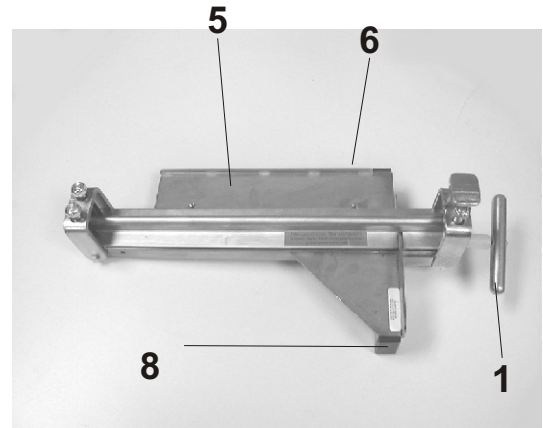

Belt Cutter Squaring

- 1.1 To open the Cutter, ensure the Operating Handle/Blade assy (1) is fully retracted, depress and swing outwards the Front Clamp (2) and lift the Top Arm (3).
- 1.2 Insert the belt to be cut up to the Belt Squarer (4). Close the Top Arm (3).
- 1.3 Pull the Operating Handle/Blade assy (1) until it hits the stop. Open the Top Arm (3), remove the belt and return the Operating Handle assy (1) to the retracted position

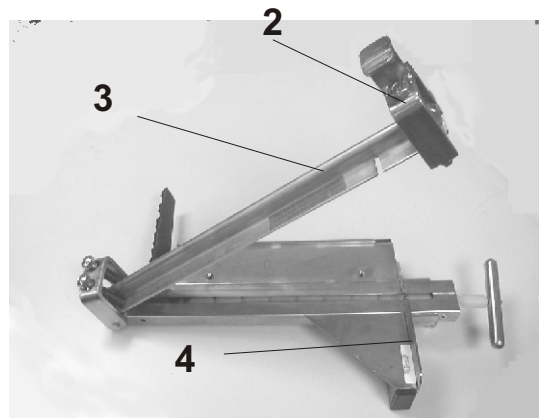

Belt Skiving

- 2.1 Place the belt across the Skiver Bed (5) and position it so as to allow the Skiver 18 to slide freely between the belt and end stop (6), close the Top Arm (3)
- 2.2 Follow the Operating instructions for the Skiver 18.

